









### 13 - MANUAL OVERRIDES

### 13.1 - Manual override, boot protected

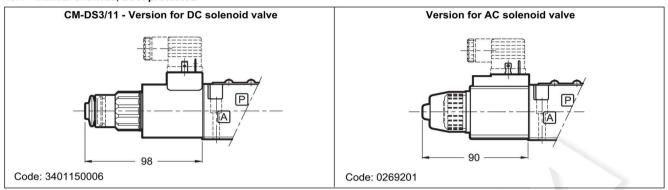


### 13.2 - CH-DS3/11 Lever manual override (only for DC solenoid valve)

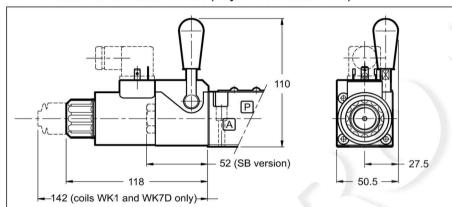


**NOTE**: The lever device is always located in the A side of the valve.

The high resistance to corrosion valves (par. 16) are equipped with a boot for solenoid tube protection.


# 13.3 - CP-DS3/10 Push manual override (only for DC solenoid valve)

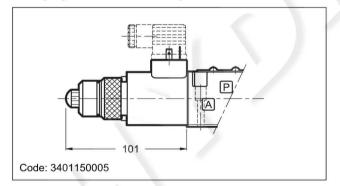

# 13.5 - CPK-DS3/10 Push manual override with mechanical retention (only for DC solenoid valve)

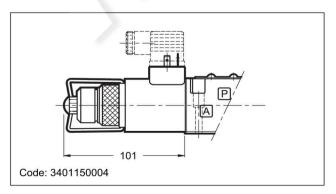

# 13.4 - CK-DS3/10 Knob manual override (only for DC solenoid valve)

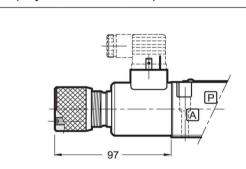

When the set screw is screwed and its point is aligned with the edge of the knob, tighten the knob till it touches the spool: in this position the override is not engaged and the valve is de-energized. After adjusting the override, tighten the set screw in order to avoid the knob loosing.

Spanner: 3 mm

Code: 3401150009